

**DRAX**  
Designed by Science

V1.2E

USER'S MANUAL

SPT-1000C

EU

# DRAXFIT<sup>+</sup>



Be sure to read the manual before using the product in order to use safely and correctly. Please keep user manual at a place to be available easily.


# CONTENTS

---

|                                     |    |
|-------------------------------------|----|
| <b>1. BEFORE YOU START</b>          | 2  |
| <b>2. INSTALLATION AND ASSEMBLY</b> | 5  |
| - TECHNICAL SPECIFICATIONS          | 5  |
| - ENVIRONMENTAL SPECIFICATIONS      | 5  |
| <b>3. HOW TO USE</b>                | 6  |
| - ONE-WAY DRIVING SYSTEM            | 6  |
| - DISPLAY OVERVIEW                  | 7  |
| - FUNCTION OF BUTTONS               | 7  |
| - DISPLAY OF VALUE                  | 7  |
| <b>4. SPECIFICATION</b>             | 8  |
| <b>5. MAINTENANCE</b>               | 9  |
| <b>6. LIMITED WARRANTY</b>          | 11 |

# 1 BEFORE YOU START

The following safety signs are affixed to the SPT-1000(C).

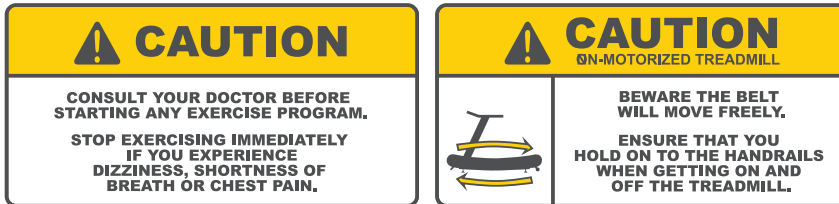

## Caution

Please make sure to read the following precautions, precautions and information before operating the treadmill. Failure to adhere to the following will void warranty.

## SAFETY INSTRUCTIONS

- The owner of this treadmill must inform all users of the safety precautions and the methods of correct usage.
- Always operate the treadmill in accordance with the instructions.
- The treadmill must remain horizontal during installation ensuring a clearance of at least 2.5m (98.4") to the rear of the treadmill.
- The treadmill must be installed indoors in a location free of moisture and dust.
- The treadmill must be correctly assembled and tested before operation.
- Children under the age of 12 are not to use the treadmill.
- Pets are not to use the treadmill.
- The maximum weight supported by the treadmill is 180kg.(400 lbs)
- Only one user at a time is permitted to use the treadmill.
- The user is to wear appropriate clothing and shoes whilst using the treadmill.
- Baggy or loose clothes will catch on the treadmill and must be avoided.
- Do not spill food or drink on the treadmill.
- Regularly check operation and components parts of the treadmill.  
Securely tighten any loose fitting or connection.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

## Danger

- Do not wet the surface of the SPT-1000(C) with any liquids. Cleaning involves only the use of a fine mist sprayer or a damp cloth.
- Any liquid container in proximity to the SPT-1000(C) must have a tight fitting cap or lid. Do not use the SPT-1000(C) if a liquid has been spilt on any surface.
- If the operation of the SPT-1000(C), does not feel correct, or a hazard is suspected, do not attempt to repair the SPT-1000(C).

## Attention

Please consult your physician before commencing any exercise program. Permission must be obtained from a health professional for any of the following health conditions of the user :

- pregnancy
- chronic respiratory disease
- diabetes
- heart disease
- high cholesterol
- cigarette related or other chronic disease
- high blood pressure
- physical disability

**Stop exercising immediately if dizziness, chest pain, nausea or other health abnormality is felt during exercise.**

**Please consult your physician before continuing the exercise. Any repair or maintenance work must be conducted by a qualified engineer or recognized gym Maintenance Company.**

## Danger

- The SPT-1000(C) is user powered. The user controls the rise or fall of the speed.
- There is no emergency stop function in the SPT-1000(C).
- Every user must become familiar with the mechanism and functions before using the SPT-1000(C).
- The SPT-1000(C) must be installed horizontally on a hard surface.
- The movement of the belt is free. Ensure entry to the SPT-1000(C) is via the rear, gripping the handles when embarking or disembarking the SPT-1000(C).
- Keep hands away from all moving surfaces.
- Do not allow a towel or clothing to become caught in the moving surface of the SPT-1000(C). Shoelaces must be enclosed and short enough not to touch the ground. Do not use high heels, or shoes with leather soles.
- The handles of the SPT-1000(C) is designed to support 180kg (400 lbs) in the range of 0 ~ to 24km/h (14.90mph).



- After completion of an exercise, do not forcibly stop the running belt.
- Always use the handles when accelerating or decelerating, and when embarking or disembarking the SPT-1000(C).
- Examine the SPT-1000(C) regularly for safe operation. Repair any problem immediately it is identified Implement a regular maintenance plan for the SPT-1000(C).
- Do not use for children under the age of 12 without adult supervision.
- Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death If you feel faint stop exercising immediately.

## FCC AND IC COMPLIANCE INFORMATION \_

CAN ICES-003(B)/NMB-3(B).

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.



### Attention

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



### Warning

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## **2** INSTALLATION AND ASSEMBLY ---

### **TECHNICAL SPECIFICATIONS \_**

The SPT-1000(C) does not require any electrical wall outlet. The SPT-1000(C) is a self-paced treadmill. The running belt surface of this product is very different to the general surface of a conventional treadmill and provides significant traction and an experience never seen in a typical treadmill.

### **ENVIRONMENTAL SPECIFICATIONS \_**

- Operating conditions: temperature 10°C ~ 40°C / humidity 20% ~ 95%.
- Transportation and storage conditions: temperature -18°C ~ 49°C / Humidity 20% ~ 95%.

## 3 HOW TO USE

### ONE-WAY DRIVING SYSTEM

This product is a running belt and belongs to the family of non-motorized products.

It is designed to facilitate the user to control the movement speed.

It is designed to be driven in one direction only for the user safety.

The one-way drive system provides stability to the user and to enter and leave safely from the rear of the SPT-1000(C).

#### **Warning**

- Boarding or getting off is only to be done from the rear of the SPT-1000(C).
- Never ride in the front of the unit.
- Never place a single foot on the unit.



- This product has been designed to streamline a runner's performance, according to the user's foot location.
- Please become fully proficient in the SPT-1000(C) use and safety prior to exercise.

## DISPLAY OVERVIEW \_



## FUNCTION OF BUTTONS \_

- RESET : Press the RESET button, all display value will be initialized.
- SET : Press the SET button, exercise goal value will be saved.
- MODE : Press the MODE button, TIME, DISTANCE, CALORIE will blink in order.
- ▲ : The value of entering will increase.
- ▼ : The value of entering will decrease.

## DISPLAY OF VALUE \_

- SPEED : Display the current speed(km/h).
- TIME : Display the exercise time.
- DISTANCE : Display the exercise distance.
- CALORIE : Display the exercise calorie burned.
- HEARTRATE : Display the current heart rate, if you wear a chest belt(option).



### Warning

Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death.  
If you feel faint stop exercising immediately.

## 4 SPECIFICATION

| Specification       | DRAXFIT <sup>+</sup>  |
|---------------------|---|
| Speed Range         | Controllable running velocity on oneself  |
| Roller Diameter     | Ø175mm (6.9")   |
| Track Size          | 1640 x 430 mm (64.6" x 16.9") L x W   |
| Product Dimensions  | 1825 x 784 x 1608 mm (71.9" x 30.9" x 63.3") L x W x H                              |
| Max. allowable W.T. | 180kg (400 lbs)   |
| Weight              | 130kg (290 lbs)   |
| Electric Power      | N/A (Non-motorized Treadmill)   |
| Display Information | Speed Range, Time, Distance, Heart-Rate, Calorie                                    |
| Safety Function     | Handrail supported<br>The application of one way bearing for user-safety            |
| Other Features      | Running belt structure for shock absorption   |
| Product Picture     |  |

## 5 MAINTENANCE

---

### TROUBLE SHOOTING \_

- **When you cannot turn on the power**
  - Check the battery on the back of the console.
- **When a friction sound is heard from beneath the machine**
  - Check if any foreign substances or objects are stuck underneath the machine.
- **When the machine stops suddenly**
  - Check if the user is using the machine in the proper way suggested by the manual.
  - Never exercise backwards or do anything opposite to the normal movement.
  - Check if the running belt is damaged, and replace it if it has a problem.

### MAINTENANCE \_

- **Management and Prevention**
  - Clean the exterior of product by using a dry, soft cloth. Do not clean by using liquids such as ammonia or acid liquids.
  - Check the function of emergency stop and stop button at least once a week.
  - Clean away objects and dust that can harm the underside of the product by using a vacuum cleaner.
  - Clean away objects such as foreign substances on the running belt of treadmill by using a vacuum cleaner.
  - Before using the treadmill, check if any foreign substances are stuck on the running belt or deck.
  - Check if the running belt of treadmill is twisted.



#### Notice

The product and safety of user are assured if the user maintains the product regularly. In case of defective components, do not use the product until they are fixed or replaced. As summarized below, if there are any objects that interfere with the operation, remove or change them safely.



**Notice**

Please use a soft, light cloth when you clean the exterior of product. Rather than cleaning the product directly, clean it by using a vacuum cleaner after using a cloth.

**• Product Management Schedule**

Please follow the following schedule for maintenance of product and prevention of defects.

| Component          | Weekly   | Monthly          | Quarterly | Twice a Year |
|--------------------|----------|------------------|-----------|--------------|
| Frame              | Clean    |                  | Inspect   |              |
| Display            | Clean    | Inspect          |           |              |
| Switch             | Clean    | Inspect          |           |              |
| Handrail           | Clean    |                  |           | Inspect      |
| LevelFoot          |          | Inspect / Adjust |           |              |
| RunningBelt        | Clean    |                  | Inspect   |              |
| Common             |          |                  |           |              |
| Machine horizontal | *Inspect |                  |           |              |
| Bolts / Nuts       |          |                  |           | Inspect      |

\* Use horizontal indicator to check.

## 6 LIMITED WARRANTY

|                 |                      |
|-----------------|----------------------|
| Product Name    | DRAXFIT <sup>+</sup> |
| Model Name      |                      |
| Serial No.      |                      |
| Warranty Period |                      |
| Purchase Date   |                      |

1. DRAX warrants this product to be free from defects in workmanship and material, under normal use and service conditions for a period of one year from the date of purchase (Running Belt and Motor Belt for six months from the date of purchase). This warranty extends only to the original purchaser. DRAX obligation under this warranty is limited to replacing or repairing, at DRAX option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by DRAX at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by DRAX. This warranty does not extend to any product or damage to a product caused by or attributable to DRAX authorized service center, to products used for specifically set forth above is authorized by DRAX.
2. DRAX is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature.
3. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.



MEMO



## Designed For Your Health & Happiness

We design for your healthy living and happiness

DRAXFIT<sup>+</sup>

---

**DRAX**

---

V1.2E

DRAXFIT<sup>+</sup>



**DRAX Inc.**

26, Jeonpa-ro 62Beon-gil, Manan-gu, Anyang-si, Gyeonggi-do, 14086, KOREA

Tel : +82-31-459-8530 Fax : +82-31-459-8531 E-mail : [drax@draxfit.com](mailto:drax@draxfit.com) [www.draxfit.com](http://www.draxfit.com)